

INSTALLATION TOOLS



Circular saw



Tape Measure




Nail Gun




Adhesive

INSTALLATION

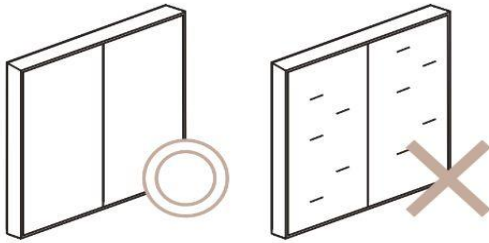


1

Prepare the Wall: Ensure the wall is clean, dry, and smooth. Fill in any holes or imperfections, and allow the wall to dry completely before proceeding.

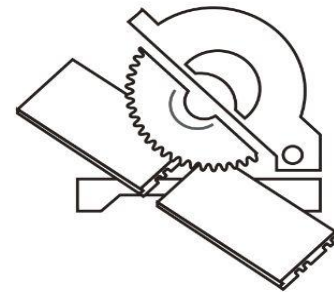


2

Measure and Cut the Panels: Measure the height and width of the wall to determine how many panels you'll need. Cut the end panels to the appropriate size using a circular saw or utility knife if necessary.

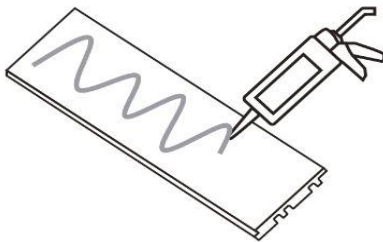


3

Apply Adhesive: Apply a strong adhesive or construction glue to the back of the fluted panels. Be sure to spread the adhesive evenly to ensure proper bonding.

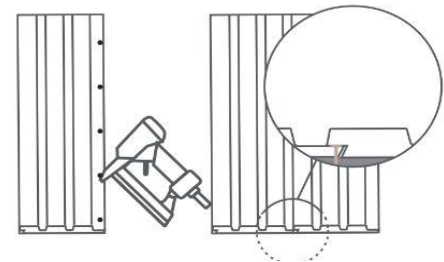

4

Install the Panels: Starting from the bottom, attach the panels to the wall. Press firmly and hold for a few seconds to ensure a strong bond. Use a level to ensure the panels are aligned correctly. Optional: Use a nail gun to insert nails into the tongue of the panel edge. Cover pin marks with the grooves of the adjacent panel.

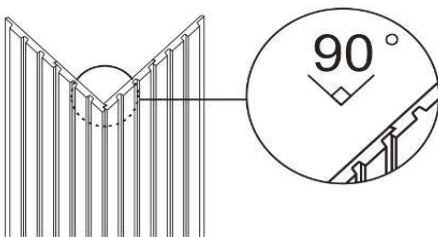

5

Finish and set: After all the panels are installed, apply trim to cover any gaps along the edges. For corners, align the two grooves to create a seamless finish. Use a damp cloth to remove any excess adhesive, and allow the panels to set undisturbed for at least 4 hours. For optimal results, let the glue fully cure for 24 hours.