UV Marble Panels

Installation Guide

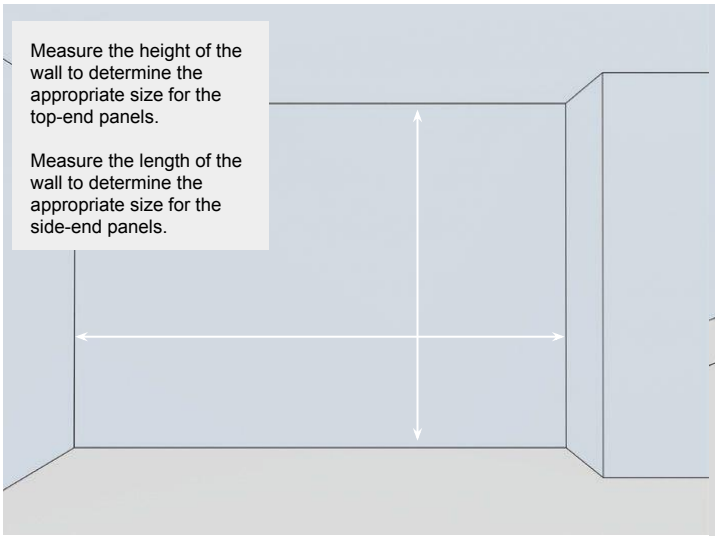

Measure the height of the wall to determine the appropriate size for the top-end panels.

Measure the length of the wall to determine the appropriate size for the side-end panels.

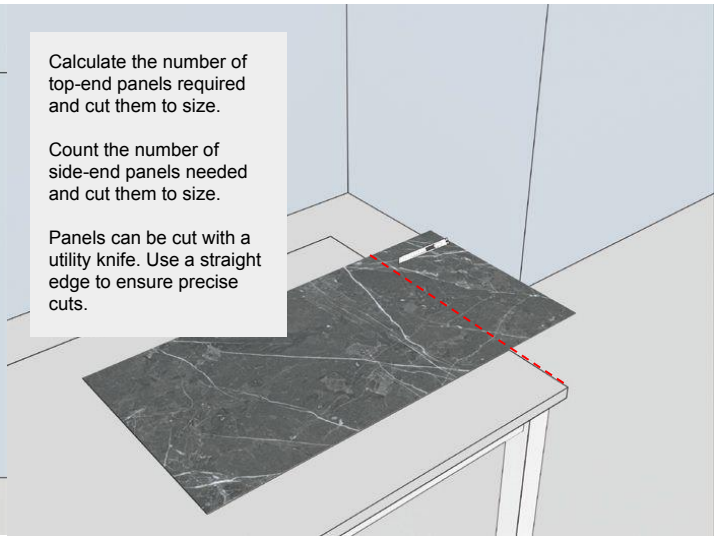

Calculate the number of top-end panels required and cut them to size.

Count the number of side-end panels needed and cut them to size.

Panels can be cut with a utility knife. Use a straight edge to ensure precise cuts.

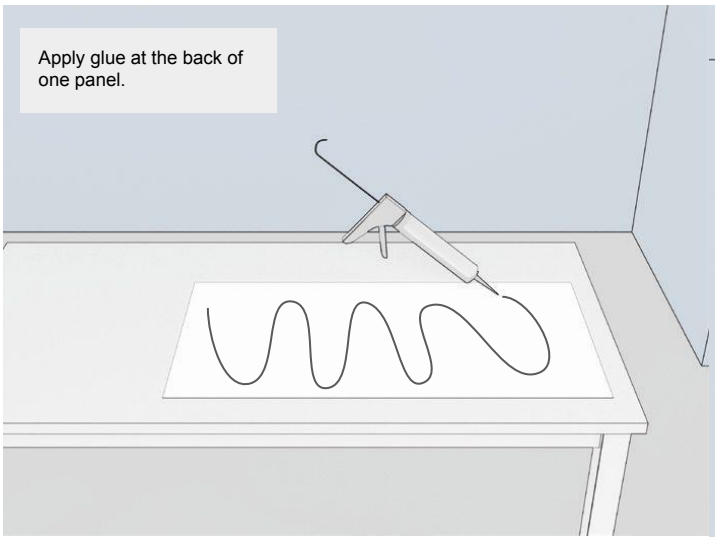

Apply glue at the back of one panel.

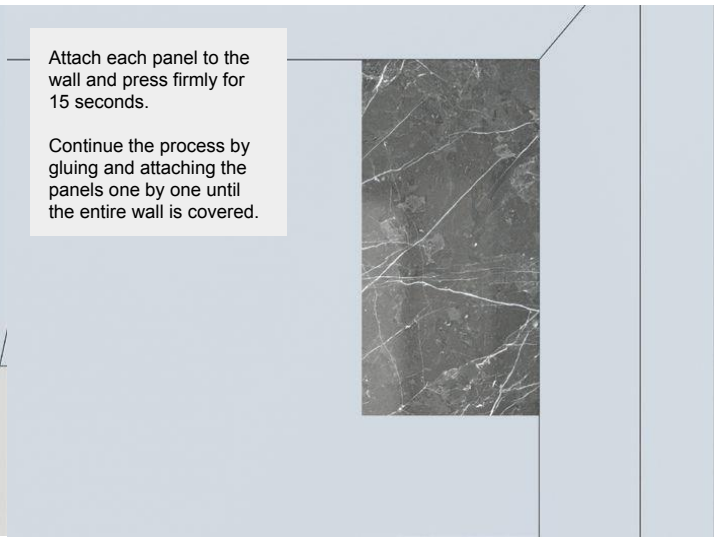

Attach each panel to the wall and press firmly for 15 seconds.

Continue the process by gluing and attaching the panels one by one until the entire wall is covered.

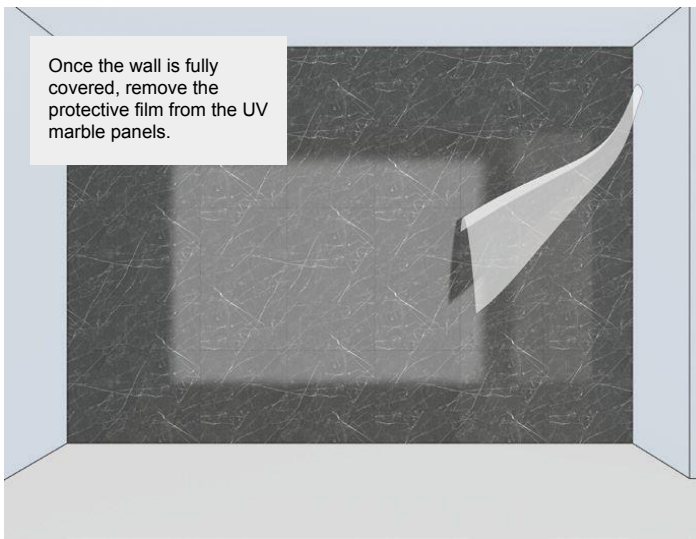

Once the wall is fully covered, remove the protective film from the UV marble panels.

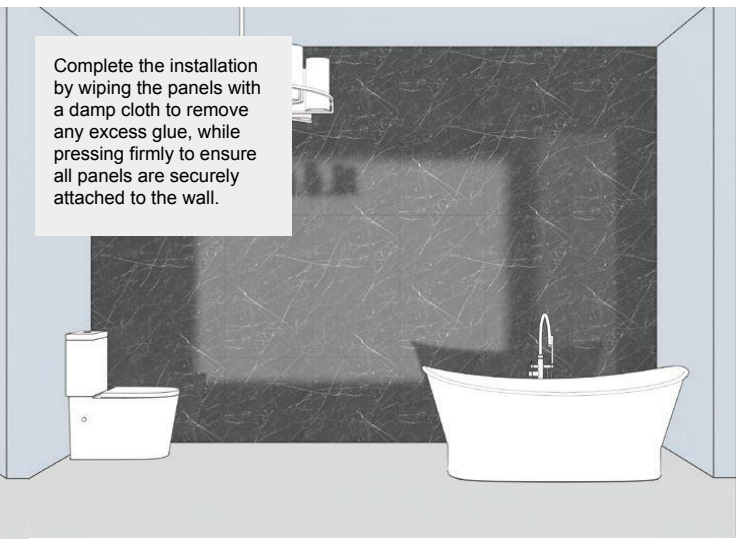

Complete the installation by wiping the panels with a damp cloth to remove any excess glue, while pressing firmly to ensure all panels are securely attached to the wall.